


# RP99ZB

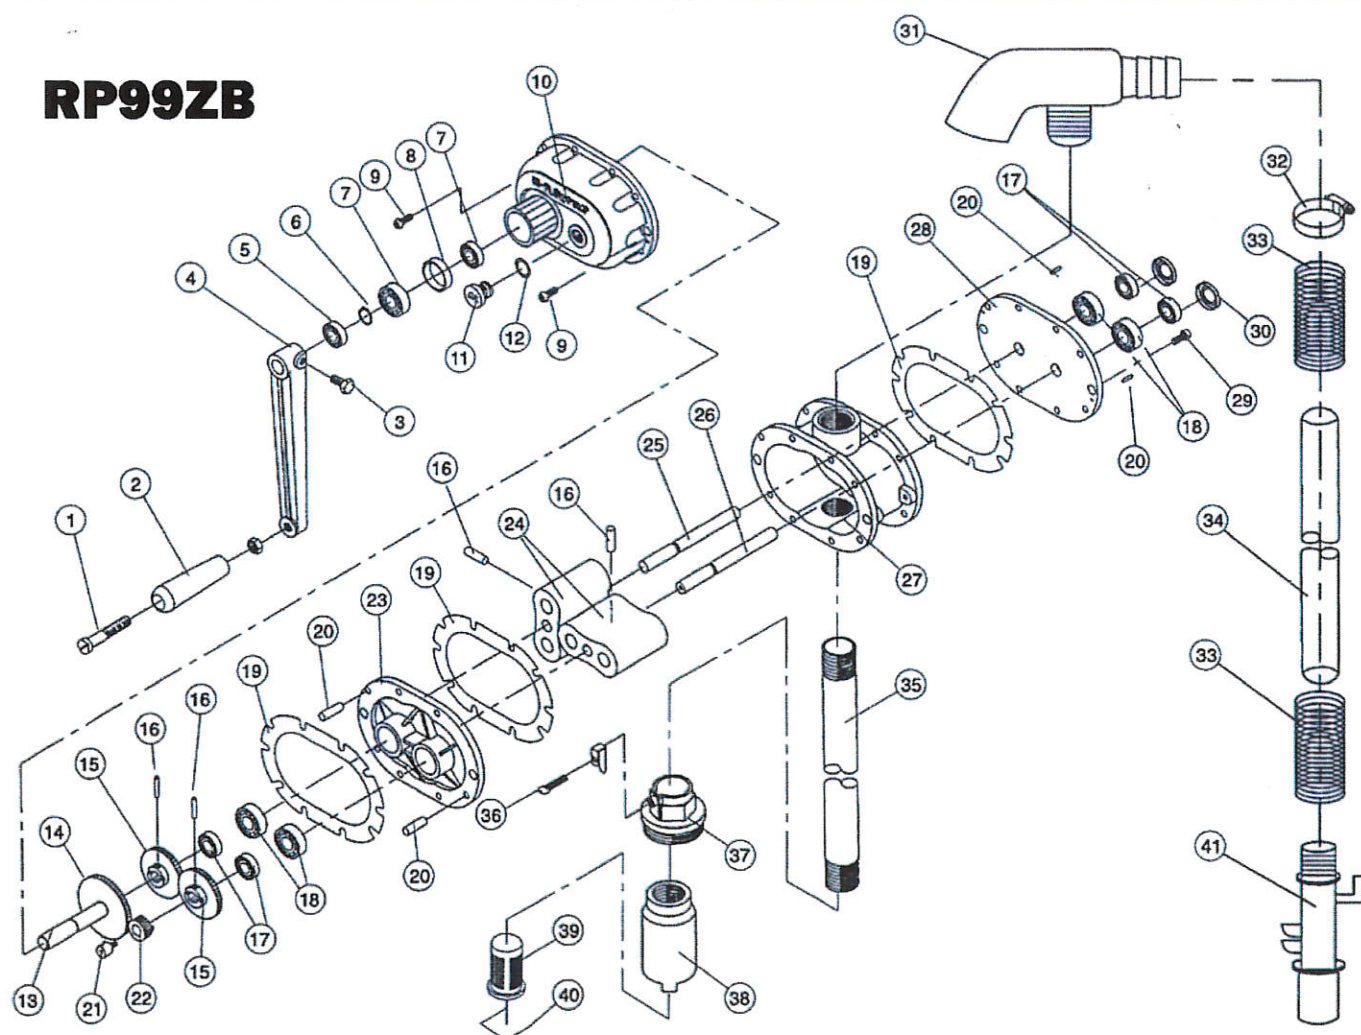

No	PARTS LIST	QTY	No	PARTS LIST	QTY
1	Handle rivet	1	21	Screw	1
2	Handle	1	22	Pinion gear	1
3	Hexagon bolt	1	23	Inside Cover	1
4	Crank Arm	1	24	Roots	2
5	Oil Seal	1	25	Roots shaft	1
6	Stop ring	1	26	Roots shaft	1
7	Bearing	2	27	Housing	1
8	Bearing collar	1	28	Outside cover	1
9	Screw	10	29	Screw	10
10	Gear Cover	1	30	Bearing cap	2
11	Rhombic bolt	1	31	Spout	1
12	O-ring	1	32	Hose band	2
13	Reinforcement shaft	1	33	Red ring Spring	2
14	Reinforcement gear	1	34	Delivery hose	1
15	Timing gear	2	35	Suction pipe	1
16	Pin	4	36	Thumb screw	1
17	Oil seal	4	37	Larger screw	1
18	Bearing	4	38	Filter boby	1
19	Cover packing	3	39	Strainer	1
20	Pin	4	40	Filter stopper	1