

Calf milk dispensing trailer

Instructions for use

Thank you for purchasing our condor calf milk dispensing trailer, if you care for this unit correctly it will give years of service and save you many hours of time.

Please note—this trailer is not suitable for highway use.

Read these instructions through completely before using.



Before use ensure tank is clean and there is no residue or debris from manufacture still in the tank or pump. We recommend you run the pump with clean water before use.

For motor instructions please read separate manual. The motor will need filling with oil to the correct level.

Motor will run on 91 or 96 octane fuel.. Do not run motor without liquid in the pump casing.

Fill tank with milk or colostrum .

Ensure pump casing is full by releasing air from the priming bung on the top of the pump casing.

Start motor according to motor instructions, we recommend that the agitation valve is left open slightly to ensure circulation of milk through the pump at all times.

The delivery of milk can be regulated by the nozzle.

For use of the milk meter please see separate instructions.

When feeding is completed thoroughly clean out tank , hose and pump by rinsing with warm water.

There is a hose fitting in the top of the tank to connect a hose to operate the rinsing nozzle.